



20L DIGITAL MICROWAVE 800W

Model Number: IG2940 / IG2950

INSTRUCTIONS FOR USE



**Thank you for purchasing this product
Please read these instructions carefully before use**

SAFETY INSTRUCTIONS

Important: This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

WARNING: To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. This appliance is for domestic use only. This appliance is for indoor use only. Do not use outdoors.
3. Make sure the voltage in your home corresponds to the one shown on the rating label of the appliance.
4. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
5. Do not operate the oven when empty.
6. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
7. Do not operate if the door or door seal is damaged
8. **WARNING:** Children should be supervised to ensure that they do not play with the appliance.
9. To reduce the risk of fire in the oven cavity:
 - ✧ When heating food in plastic or paper container, check the oven frequently.
 - ✧ Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - ✧ If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
 - ✧ Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
10. **WARNING:** Liquid or other food must not be heated in sealed containers since they are liable to explode.
11. Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the container.
12. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
13. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
14. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
15. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
16. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
17. Utensils should be checked to ensure that they are suitable for use in microwave oven.
18. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
19. This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purpose.

SPECIFICATIONS

Power Consumption:	230-240V, 50Hz, 1280W(Microwave)
Output:	800W
Operation Frequency:	2450MHz
Oven Capacity:	20 Litres
Net Weight:	Approx.12.8 kg

Installation

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING:** Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.

Before Calling for Service

If the oven fails to operate:

1. Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
3. Check to ensure that the control panel is programmed correctly and the timer is set.
4. Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

If none of the above rectifies the situation contact Igenix Customer Services. Do not try to adjust or repair the oven yourself.


Utensils Guide

1. The ideal material for a microwave utensil is a Microwave safe transparent plastic dish.
2. Microwaves cannot pass through metal. Metallic utensils, dishes with metallic trim and aluminum foil should not be used.
3. Do not use recycled paper products when microwave cooking as they may contain small metal fragments which can cause sparks and/or fires.
4. Round/oval dishes rather than square dishes are recommended, as food in the corners tends to overcook.


The list below is a general guide to help you select the correct utensils.

COOKWARE	MICROWAVE SAFE?
Heat-Resistant Glass	Yes
Non Heat-Resistant Glass	No
Heat-Resistant Ceramics	Yes
Microwave-Safe Plastic Dish	Yes
Kitchen Paper	Yes
Metal Tray	No
Metal Rack	No
Aluminium Foil & Foil Containers	No

IG2940 – Digital Microwave at a Glance

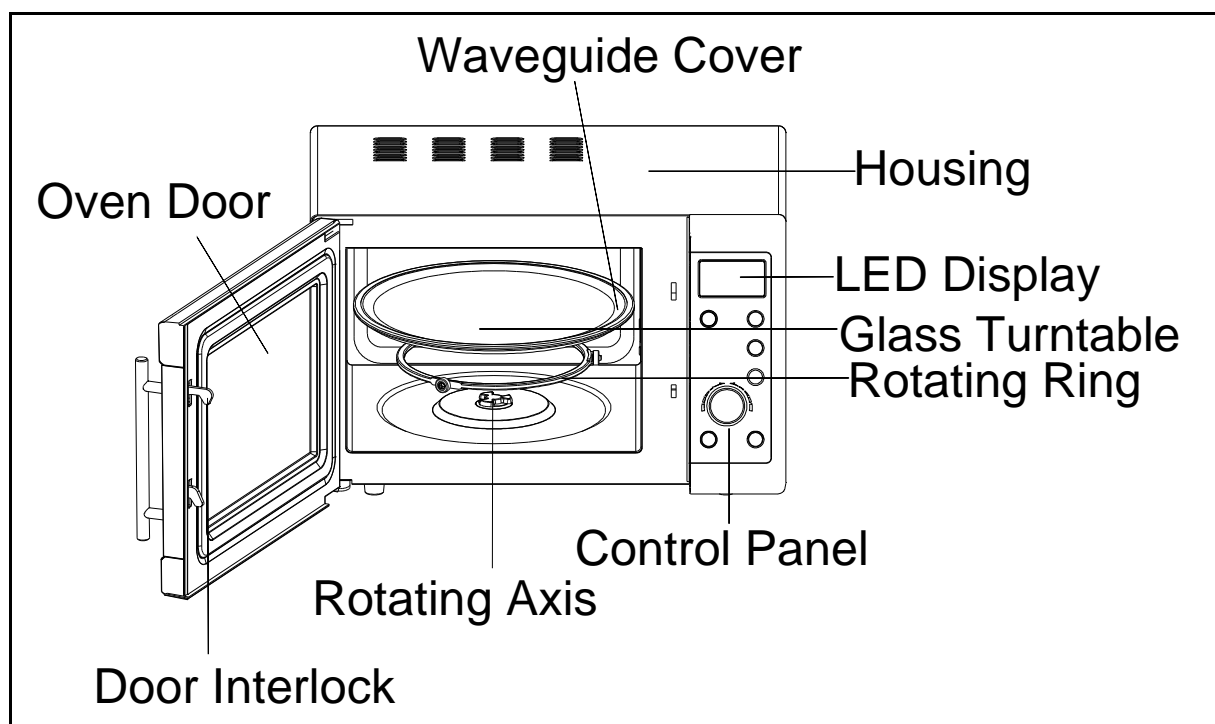

Control Panel at a Glance

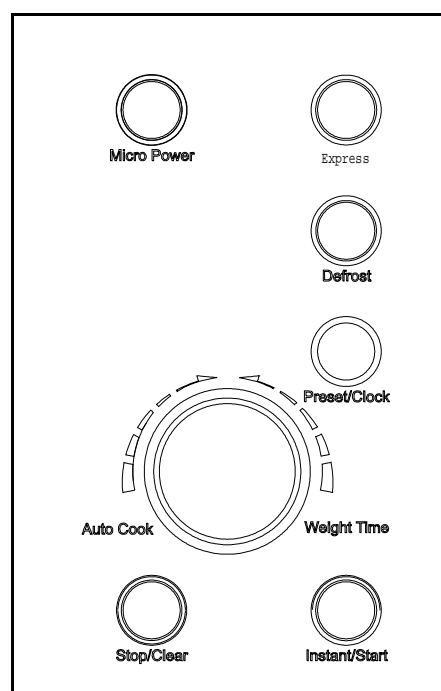

How to Set the Oven Controls

Each time you press a button a beep will sound.

Setting Digital Clock.

1. Press **Preset/Clock** button.
2. Turn **Weight/Time** to set the hour.
3. Press **Preset/Clock** button.
4. Turn **Weight/Time** dial to set the minutes.
5. Press and hold the **Preset/Clock** button for 5 seconds to confirm the setting.

Microwave Cooking

To cook with microwave power alone, press the **Micro Power** button a number of times to select a cooking power level, and then use the **Weight/Time** dial to set a desired cooking time. The longest cooking time is 60 minutes. Select power level by pressing the **Micro Power** button:

PRESS POWER BUTTON	LED DISPLAY	COOKING POWER
Once	100P	100% - High Power
Twice	80P	80% - Medium High Power
3 times	60P	60% - Medium Power
4 times	40P	40% - Medium Low Power - Defrost
5 times	20P	20% - Low Power

For example, suppose you want to cook for 1 minute at 60% of microwave power.

1. Press **Stop/Clear** button once.
2. Press **Micro Power** button 3 times.
3. Turn **Weight/Time** to 1:00.
4. Press **Start** button.

Express Start

This feature allows you to start the oven quickly. Press the **Express** button a number of times to set the cooking time up to 1 minute 30 seconds. The oven starts work at full power level immediately.

Auto Defrost

The oven allows the defrosting of meat, poultry, and seafood. The time and the defrosting power are adjusted automatically once the weight is programmed.

Press the Defrost button consecutively to display either D.1, D.2 or D.3.

D.1 – For defrosting meat. Weight range from 0.1 kg to 2.0 kg.

D.2 – For defrosting poultry, Weight range from 0.2 kg to 3.0 kg.

D.3 – For defrosting seafood. Weight range from 0.1 kg to 0.9 kg

FOR EXAMPLE: Suppose you want to defrost 0.2 kg .

1. Place the poultry to be defrosted into the oven and close the door.
2. Press **Stop/Clear** button once.
3. Press **Defrost** button twice until the screen displays D.2
4. Set weight by turning the **Weight/Time** dial.
5. Press **Start** button.

In the middle of cooking time the system will sound to remind you to turn over the food and pause until you press the **Start** button to enter into the next defrosting stage, and the system resume.

Speed Defrost

The oven can quickly defrost food to the set time you entered.

FOR EXAMPLE: Suppose you want to defrost mince.

1. Place the mince to be defrosted into the oven.
2. Press **Micro Power** button 4 times until the screen displays 40P (40% Medium Low Power).
3. Turn **Weight/Time** dial to set cooking time.
4. Press **Start** button.

Auto Cooking

This microwave oven has a default cooking menu for quick and simple operation. Auto Cooking categories are as follows:

Display	Category	Direction
A.1	Popcorn	Suitable for popping a bag of corn, weighted 85g.
A.2	Popcorn	Same as A.1 except 100g.
A.3	Pizza	Warm a piece of chilled pizza of 0.15 kg.
A.4	Beverage	Heating a cup of 250 ml liquid. Do not heat in a sealed container.
A.5	Beverage	Heating a cup of 500 ml liquid. Do not heat in a sealed container.
A.6	Potato	Total weight is about 0.45kg.
A.7	Potato	Same as A.6 except the total weight is 0.65Kg.
A.8	Fish	Suitable for steaming a fish of 0.45Kg. After the fish washed and scales removed, make a slits on the skin of fish .Put the fish on a shallow dish of 22-27cm diameter sprinkle lightly with some ingredient and cover the dish with a thin film to prevent water loss. After cooking, stand for 2 minutes.

1. Press **Stop/Clear** button once.
2. Turn **Auto Cook / Weight Time** dial. The LED display will cycle to show the menu A.1, A.2 etc.
3. Choose the appropriate menu according to the food type and weight.
4. Press **Start**.

Automatic Start / Delay Function

If you do not want the menu to be started immediately, you can preset the cooking menu and time and the preset menus will be automatically started at your set time. The setting will consist of 2 steps:

1. Setting the current clock

- Press **Preset/Clock** button.
- Turn **Weight/Time** to set the hour.
- Press **Preset/Clock** button.
- Turn **Weight/Time** dial to set the minutes.
- Press and hold the **Preset/Clock** button for 5 seconds to confirm the setting.

2. Setting the cooking menu and time.

- Select cooking power by pressing **Micro Power**.
- Turn Auto Cook / Weight Time dial to set cooking time.
- To return to current, hold the Preset/Clock button for 3 seconds then a short beep will be heard.
- Set the time you expect to start .
- Turn **Weight/Time** to set the hour.
- Press **Preset/Clock** button.
- Turn **Weight/Time** dial to set the minutes.
- Press **Preset/Clock** button to confirm the delayed menu. Now the program has been activated.
- You may check the preset time by depressing the Preset/Clock button.

Multi-Sequence Cooking

To obtain the best cooking results, some recipes may call for different cooking levels and time. You may program your menu to change as per the following example:

You want to cook at 100P (100% High Power) for 3 minutes and then 20P (20% Low Power) for 9 minutes.

1. 100P for 3 minutes

- Select 100P cooking power by pressing **Micro Power**.
- Turn the **Weight/Time** dial to set the cooking time.

2. 20P for 9 minutes

- Select 20P cooking power by pressing **Micro Power**.
- Turn the **Weight/Time** dial to set the cooking time.

Begin cooking by pressing **Start** button. When 100P microwave power cooking has finished the microwave will begin cooking at 20P automatically. You can only set a maximum of 4 sequences per time by repeating steps 1 and 2.

Child Lock

Use to prevent unsupervised operation of the oven by children. The child lock indicator will show up on display screen, and the oven can not be operated while the child lock is set.

To set the child lock Press and hold the **Stop/Clear** button for 3 seconds, a beep sounds and **LOCK** indicator will display on the screen.

To cancel the child lock press and hold the **Stop/Clear** button for 3 seconds until lock indicator on display goes off.

Cleaning and Care

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if oven gets very dirty. Avoid using spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
4. If it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
5. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

Disposal Information

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice

2
YEAR GUARANTEE

This product carries a 2 year guarantee. If you experience any problems with your Igenix product please call our Customer Services Department on 01473 271 272.



Kettle Model Number IG7400. Toaster Model Number IG3400. Microwave Model Number IG2940

**Complete your kitchen with the matching Kettle and Toaster.
Contact us to find your nearest stockist.**

igenix

View the range online at www.igenix.co.uk

Distributed by Pik-a-Pak Home Electrical
38 Bluestem Road, Ransomes Europark, Ipswich. IP3 9RR Tel: 01473 271 272